


# How to assemble

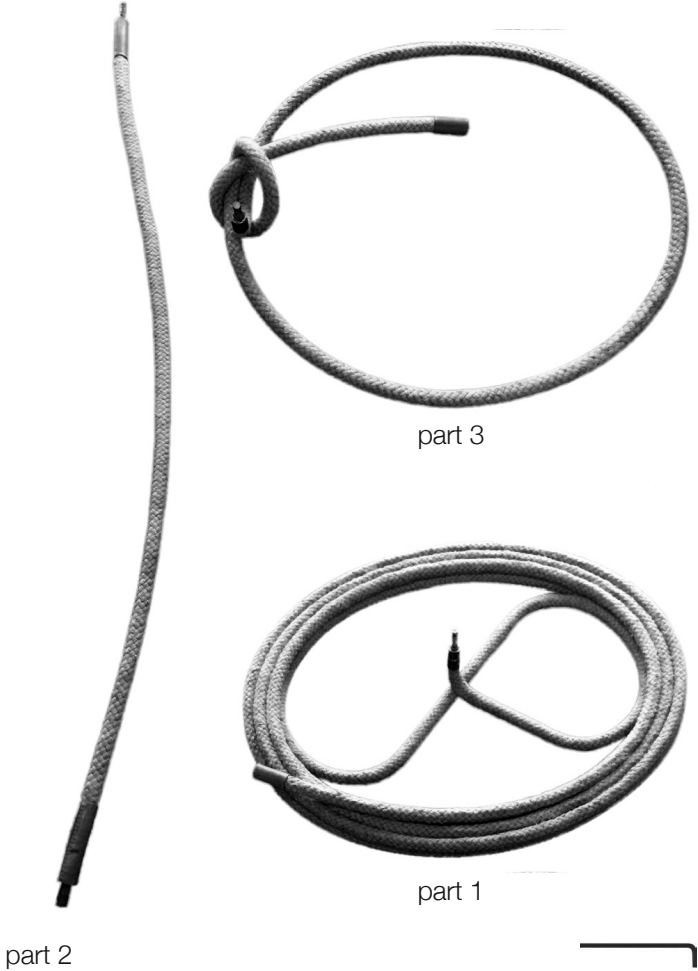

part 2

part 3


part 1



Allen key



Slide part 2 over part 1. Make sure the holes of part 1 and 2 are in the same place.

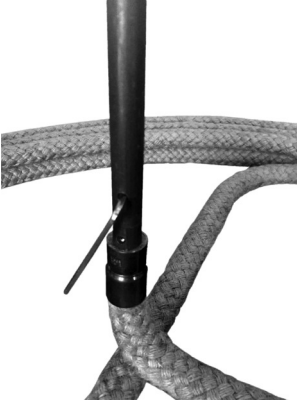

Place the included allen key in each hole and turn clockwise until secured.



Slide the leather part over the metal.



Slide part 3 over part 2. Make sure the holes of part 2 and 3 are in the same place.



Place the included allen key in each hole and turn clockwise until secured.



Slide the leather part over the metal.